


HITACHI

SERVICE MANUAL (Rev.D)

SM0059

CMP307XE CMP307XU

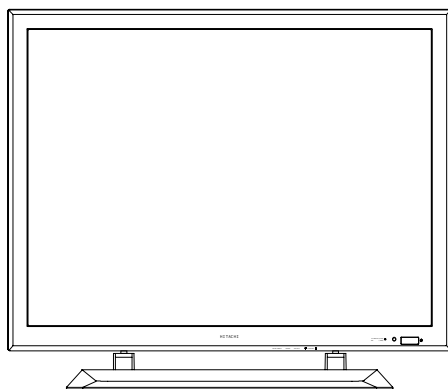

Caution

Be sure to read this manual before servicing. To assure safety from fire, electric shock, injury, harmful radiation and materials, various measures are provided in this Hitachi Plasma display. Be sure to read cautionary items described in the manual to maintain safety before servicing.

Serviceman Warning

1. Since Panel Module and front Filter are made of glass, handling to the broken Module and Filter shall be taken care sufficiently in order not to be injured.
2. Replacing work shall be started after the Panel Module and the AC/DC Power supply become sufficiently cool.
3. Special care shall be taken to the display area in order not to damage its surface.
4. The Panel Module shall not to be touched with bare hand to protect its surface from stains.
5. It recommended to use clean soft gloves during the replacing work in order to protect not only the display area of the Panel Module but also a serviceman himself.
6. The Chip Tube of Panel Module (located upper left of the back) and flexible cables connecting Panel glasses to drive circuit PWBs are very weak, so shall be taken care sufficiently not break. If you break Chip Tube, the Panel doesn't display forever.

Contents

1. Features	2	5. Block diagram	6
2. Specifications	2	6. Disassembly diagram	7
3. Names of each part	3	7. Re-Adjustment	11
4. Trouble shooting	4	8. Replacement Parts list	14

SPECIFICATIONS AND PARTS ARE SUBJECT TO CHANGE FOR IMPROVEMENT.

Plasma Display

September 2001 Digital Media Systems Division

1. Features

- 37 inches XGA high-definition color plasma display panel
- Newly developed Multi-scanning converter provides a multiscan coverage of TV signals through to PC analog signals (24kHz to SXGA(64kHz))
- Large high-quality display images free from color misconvergence and display distortion, as well as from geomagnetic effect and the magnetic effect of ambient power lines

2. Specifications

PDP Module

37 inches XGA PDP panel (aspect ratio 4:3)
 Description FPF37C12896UA
 Pixel pitch 0.735 mm(H) x 0.735 mm(V)
 Pixel structure RGB striped
 Brightness 150cd/m² (typical) with front filter
 Contrast 400:1 (typical) in dark room
 Video : 0.7 Vp-p
 Sync. : Separate H/V, TTL level
 Composite H/V, TTL level
 Sync. on Green at 0.30 Vp-p

Input Signal

RGB 1

(mD-15p)

RGB 2

(BNCx5)

Video 1

(RCA Pinx1,
S-terminalx1)

Composite Video or S-video (for S2)

NTSC3.58
 Video : Composite 1.0 V
 S-video Y: 1.0 Vp-p, C:0.29Vp-p
 Sync. : Composite sync

Video 2

(RCA Pinx3)

Component Video

Y,Pb,Pr or Y,Cb,Cr: (480i,480P,1080i,1035i)
 Video : Y : 1.0 Vp-p
 Pb/Cb,Pr/Pr : 0.7 Vp-p
 Sync. : Superimposed with Y signals

Colors

2.09 million

Synchronization

Horizontal : 24 – 64 kHz

Vertical : 50 - 75 Hz

Resolution

Horizontal : 1024 dots (max.)

Vertical : 768 lines (max.)

Viewable Image Size

37 inches (940 mm), diagonal (typical)

Viewable Image Area

Horizontal : 753 mm (typical)

Vertical : 564 mm (typical)

Color Temperature

NORM(9300 K)

Warm-up Time

30 minutes to reach optimum performance level.

Power Supply

AC 100 - 120 / 200 - 240 V (4.3A /2.2A)

50/60 Hz

(automatically selected)

Power Consumption : 390 W (typical)

(provided with power save circuit.)

Dimensions

884 (W) x 684 (H) x 99.7 (D) mm (without stand)

884 (W) x 766 (H) x 300 (D) mm (with stand)

Weight

29.8 kg (approx.) without stand


32.8 kg (approx.) with stand

Environmental Condition


	Operation	Storage
Temperature	5°C to 35°C	0°C to 50°C
Humidity	20% to 80%	20% to 80%

3. Names of each part

● Outlook

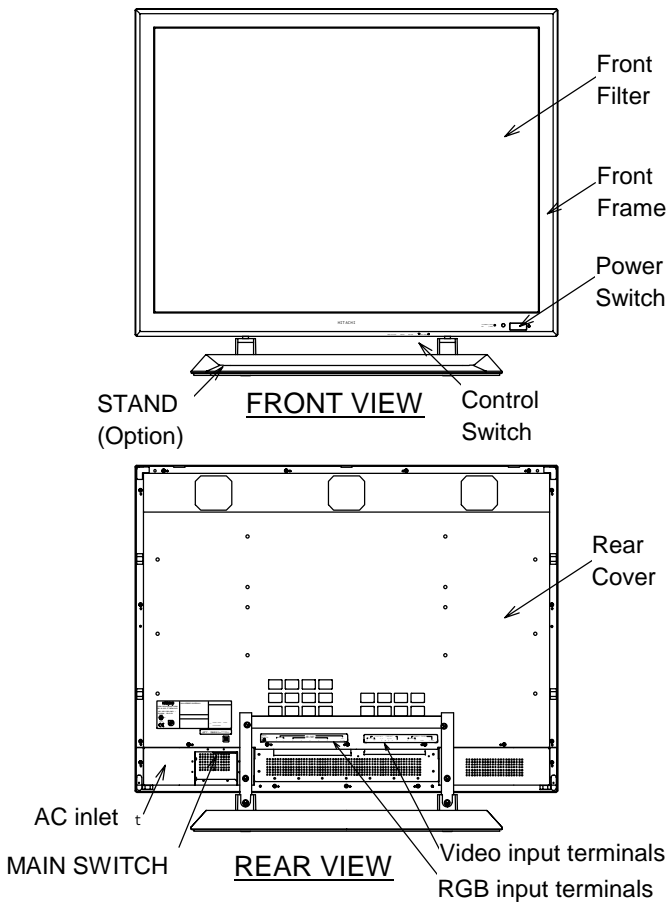

● Input terminal(D-sub connector)

 



Pin No.	Signal
1	Red Video
2	Green Video (Sync. optional)
3	Blue Video
4	No connection
5	No connection
6	Red Ground
7	Green Ground
8	Blue Ground
9	No connection
10	Ground
11	No connection
12	SDA
13	H.Sync. (or H/V composite)
14	V.Sync.
15	SCL


Message table

☞ Onscreen display


Indication	Condition
The monitor indicates the message "POWER SAVE".	The monitor detects no sync. signal.
The monitor indicates the message "OUT OF FREQUENCY".	The monitor detects a sync. signal which is out of specification, or unstable.

4. Trouble shooting

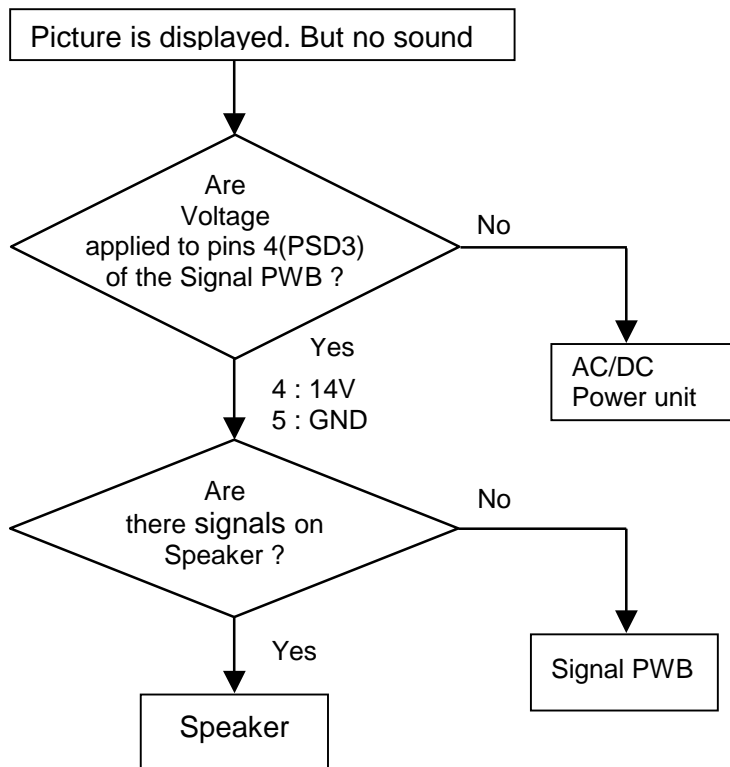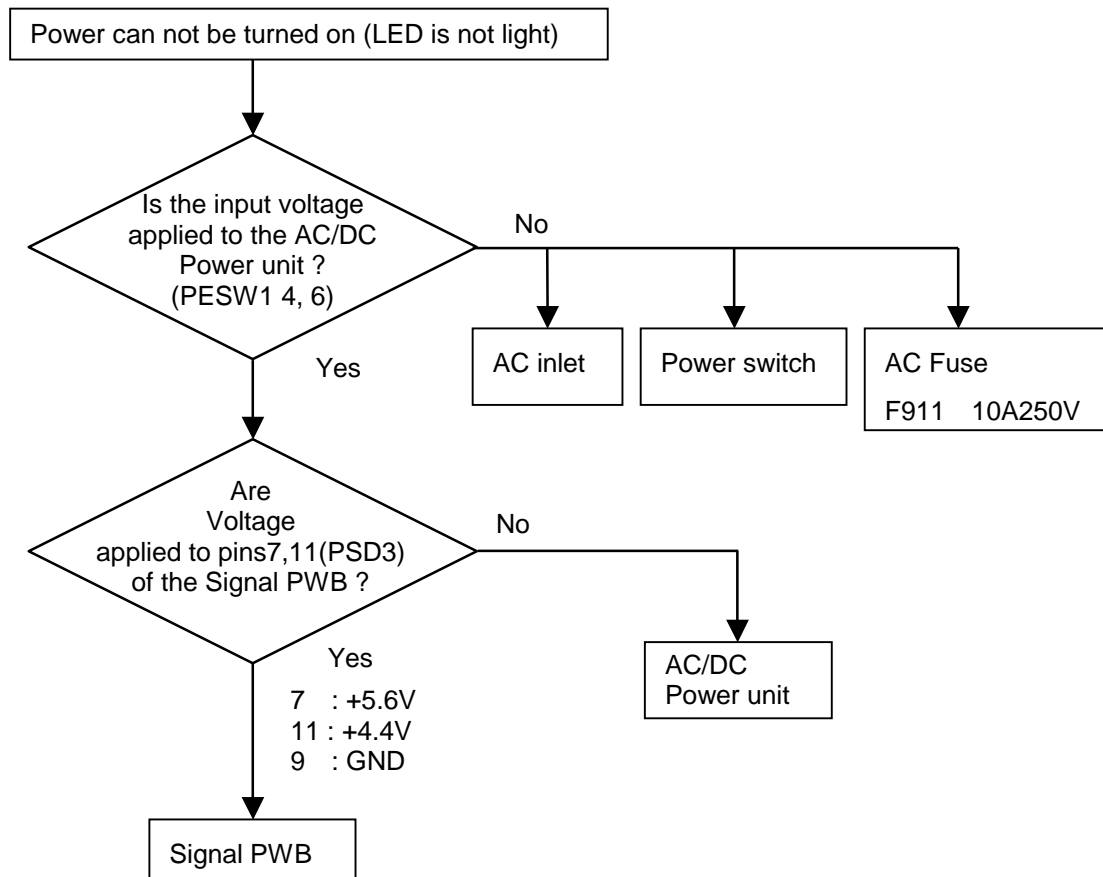

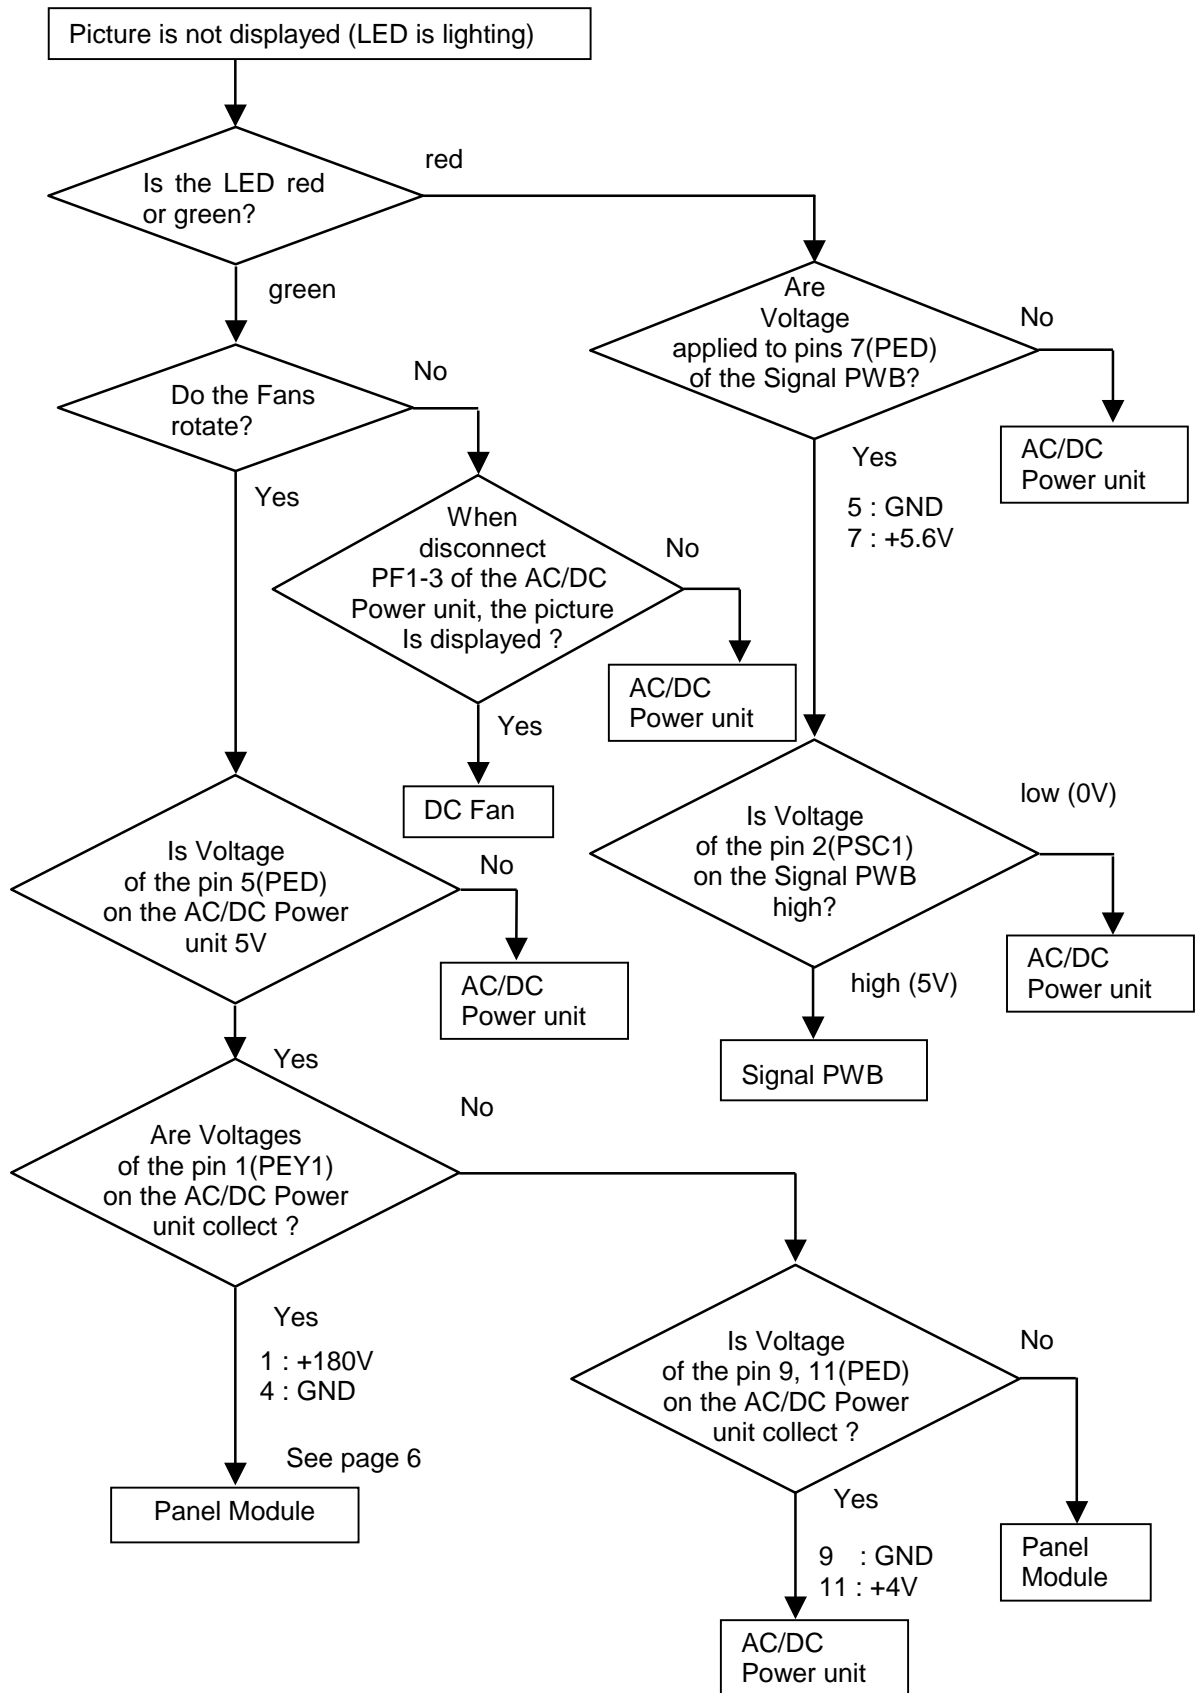

5. BLOCK DIAGRAM

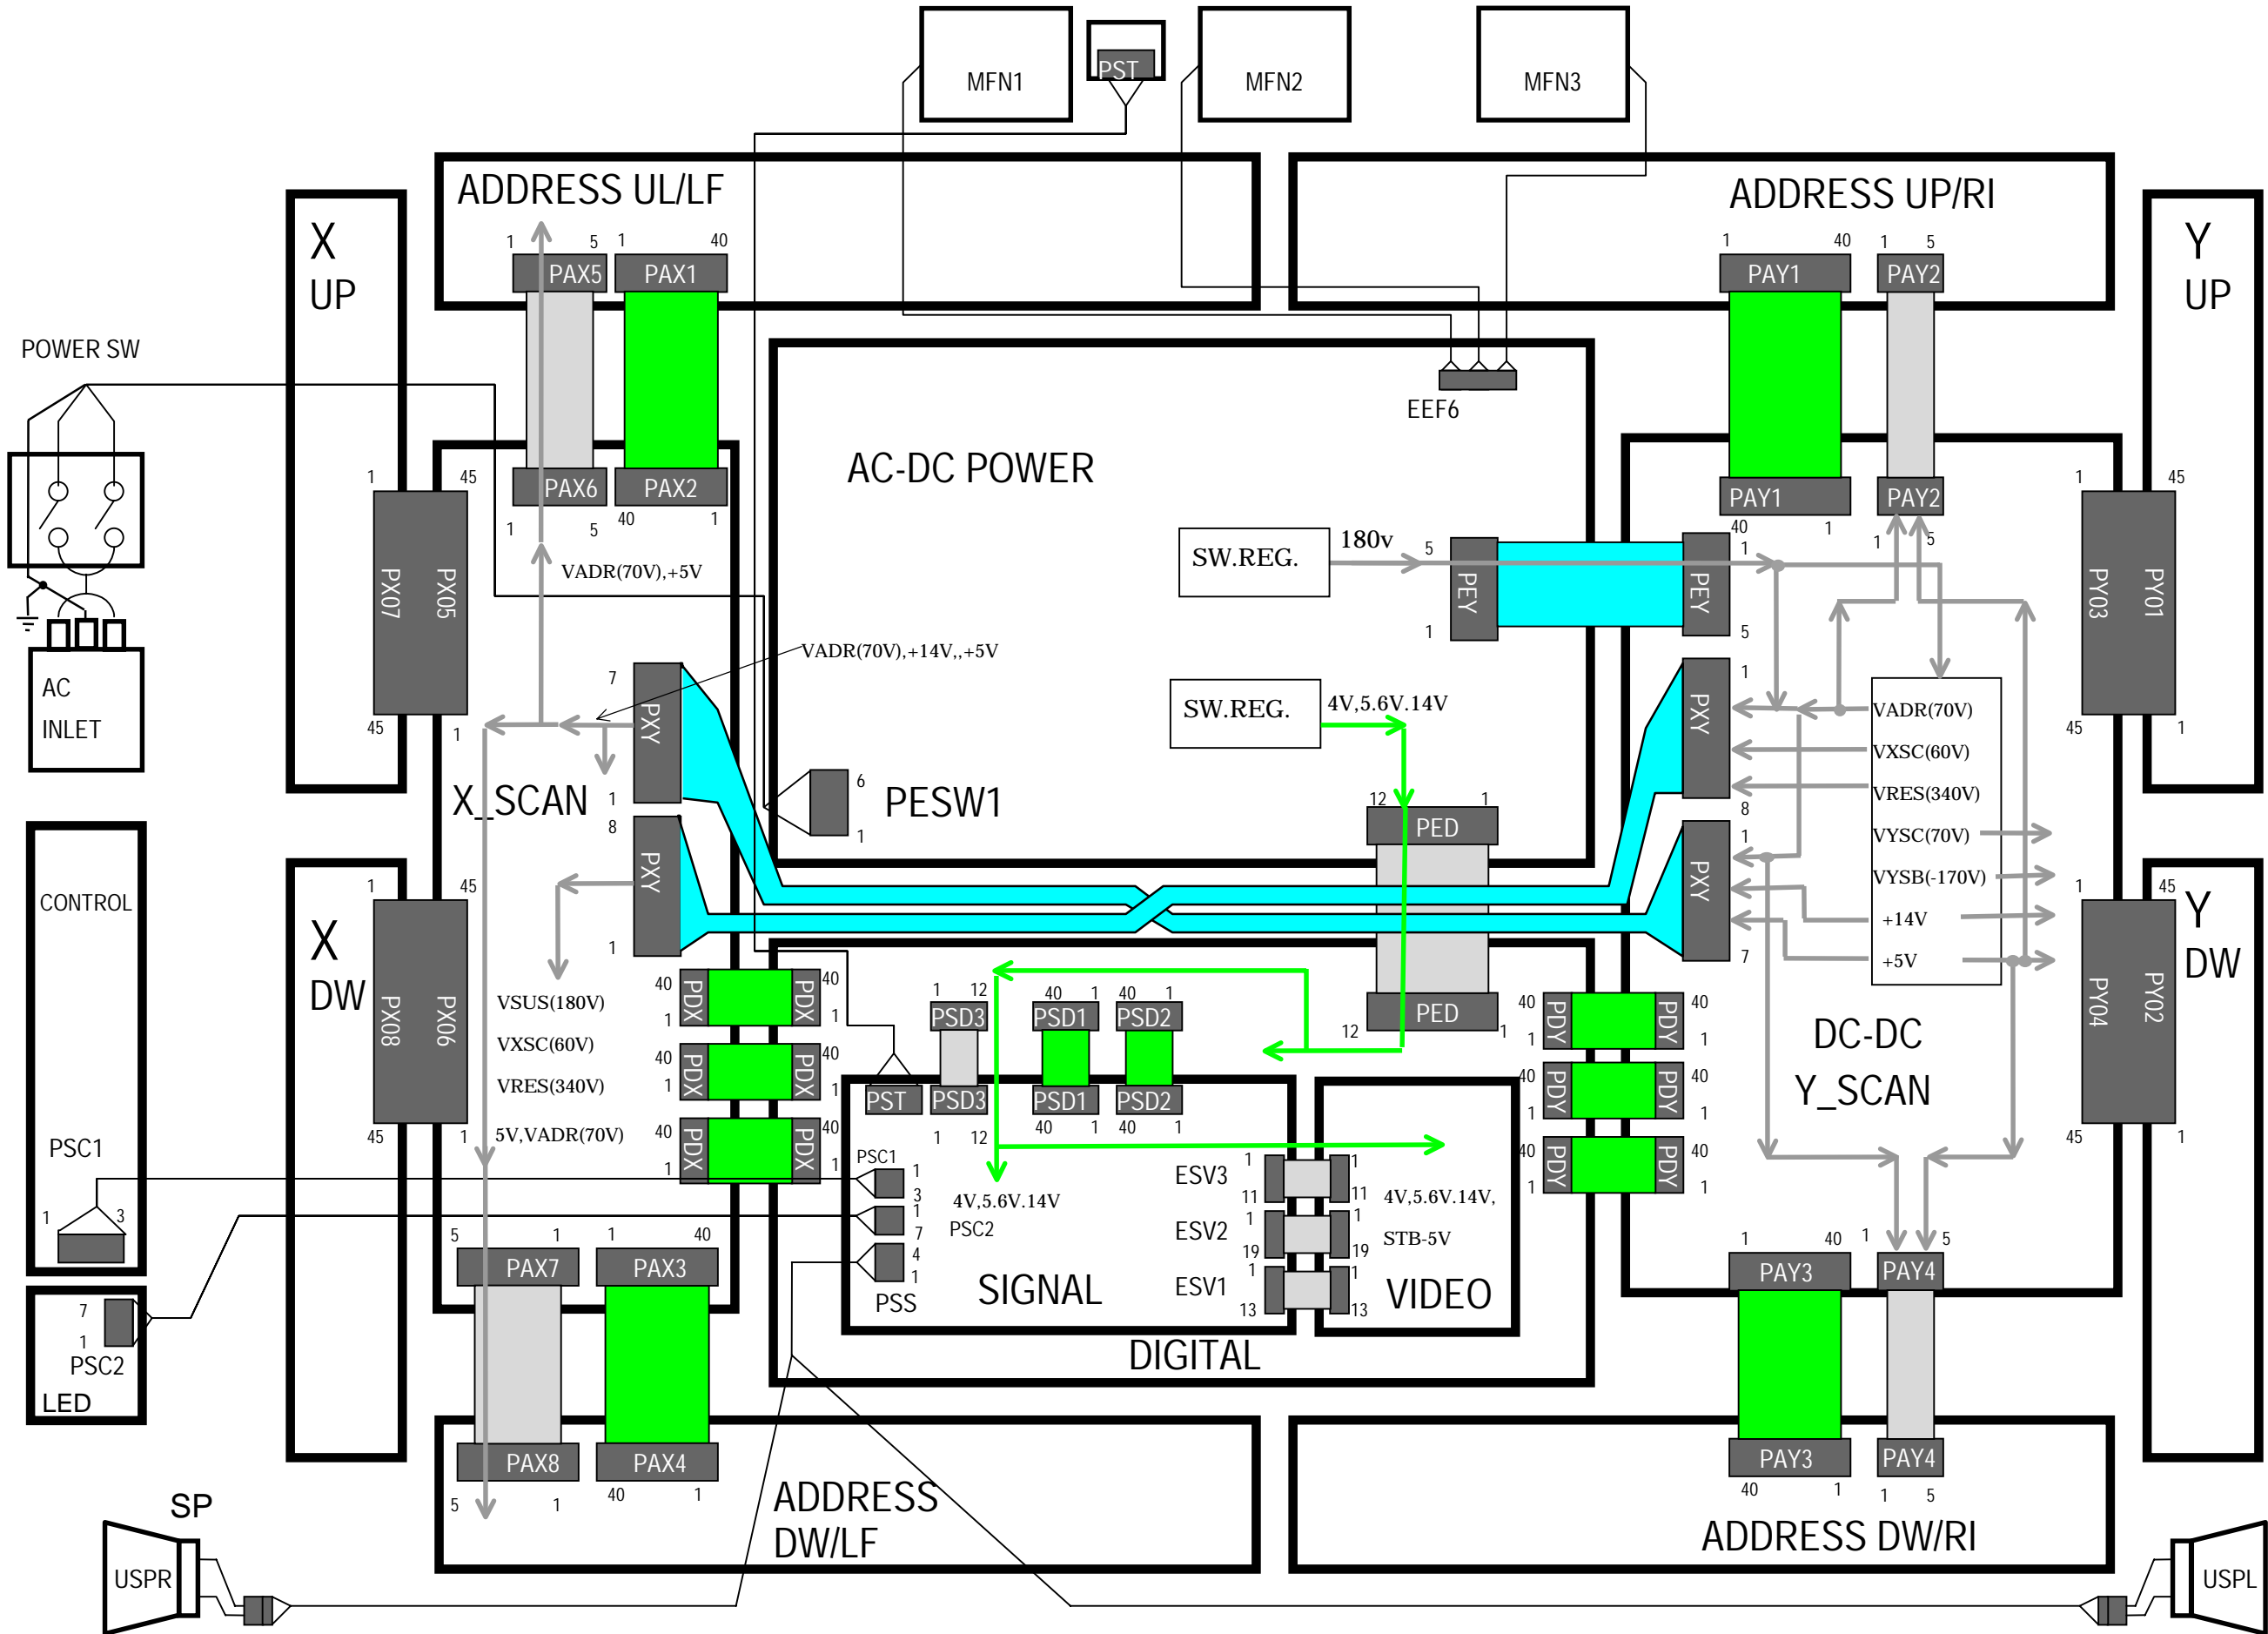



6. Disassembly diagram

(1) Remove Back Cover

Be careful not to be damaged the face of Front Filter. Remove 4 screws(a) and remove the Rear stand.

Remove 20 screws(b) , and remove Back Cover.

At this time be careful not to be damaged edges of Back Cover and its coated face.

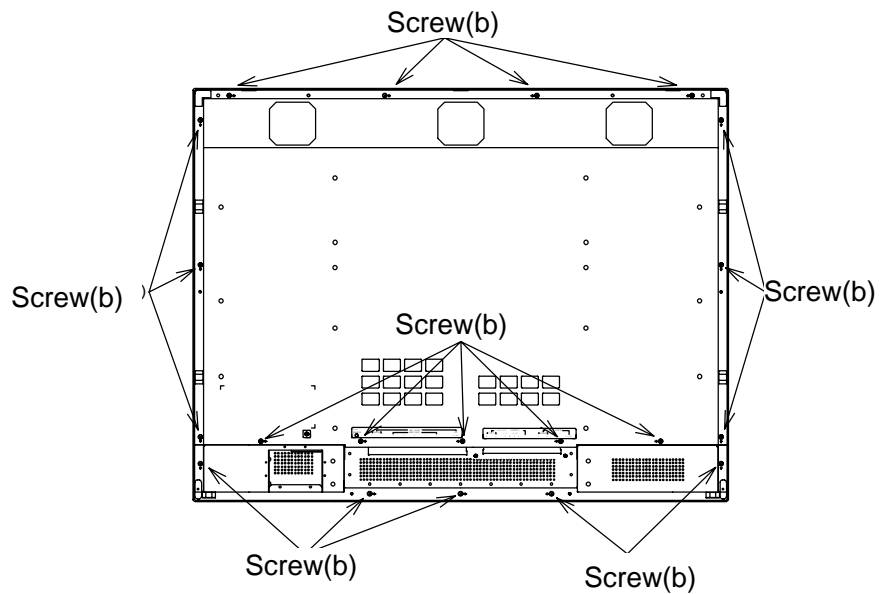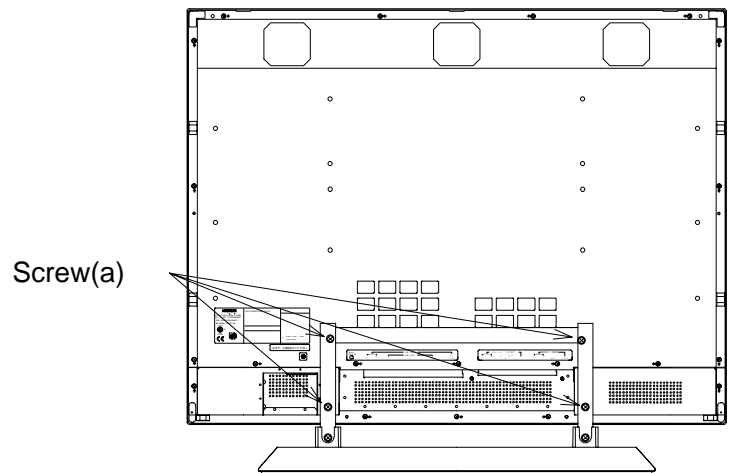





(2) Remove Signal PWB

Disconnect

ESC1(PH-3P), ESC2(PH-7P),
ESS(EH4P-HR3P/HR2P),
ESD3(EH-12P), ESD2(FFC-40P) ,
PSD1(FFC-40P)
PST ,ESV3,EVC2, EVC1
connectors.

Be careful not to be damaged the
PSV1-3 Connector holder.

Remove 2 screws(c), 8screws(f),
plastic rivet, 4screws(e) 2screws(g)
and remove Signal PWB,and
Video PWB.

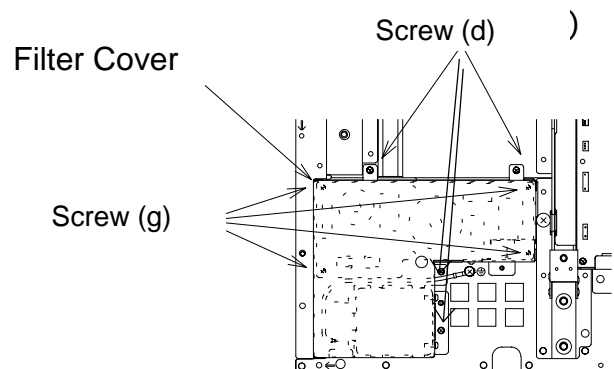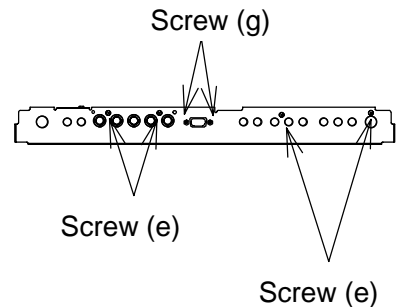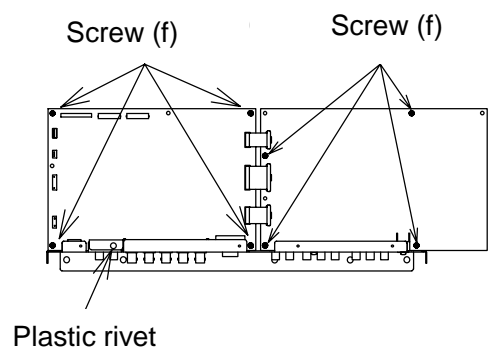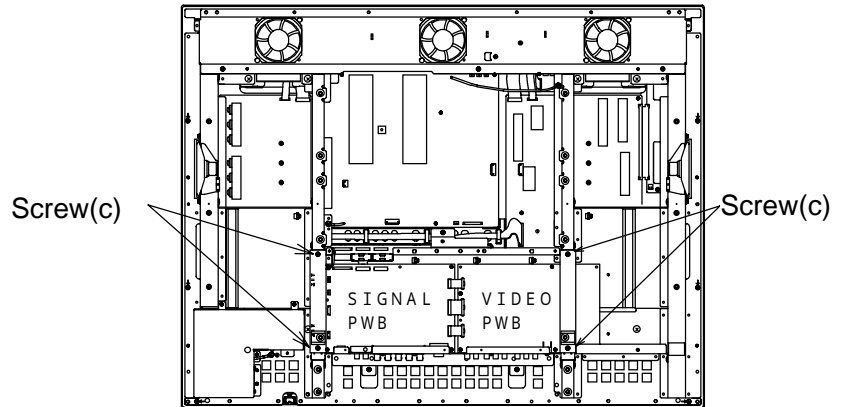

(3) Remove filter PWB

Disconnect P902A, PESW1 connector.

Remove 4screws(d) and remove
the filter cover.


Then remove 4screws(g),
and remove Filter PWB.

(4) Remove Front Frame

Remove 3 screws(l), then be careful not to be damaged the face of front filter.


Attached the Stand with 4 screws(a), then stand it vertically.

When remove front frame.

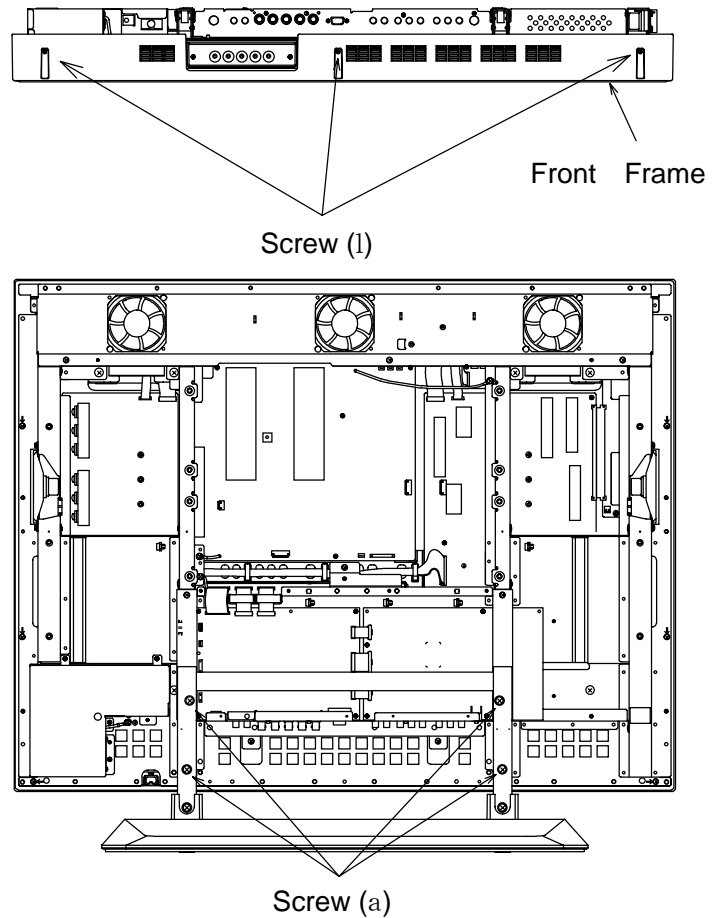


(5) Remove Front Filter(Glass)

Remove 22 screws(m), and remove Filter hold Metal and Front Filter. Be careful not to fall down the front Filter. When remove the filter hold Metal. When attach the new Front Filter, remove protection film on a side(yellow tag is marked). Then attach to the Front Frame, locating the conducting electrode side to the inside, and attach Filter hold Metal.

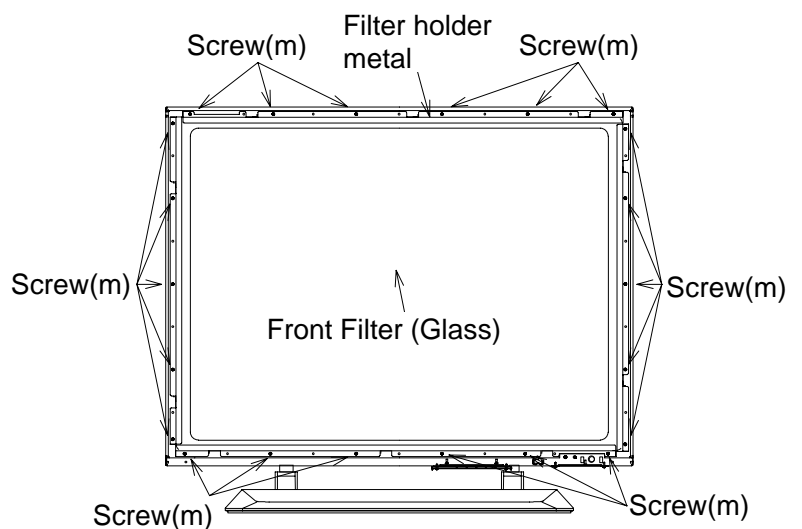


(6) Remove Fan

Remove 3 screws(k), and disconnect AEF6 or BEF6 connector, Remove Fan hold Metal. Then remove 2 plastic rivets.

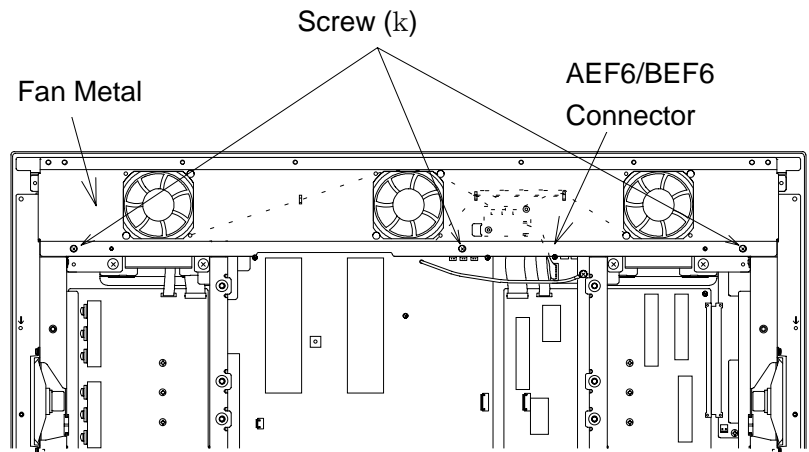


Plastic rivet

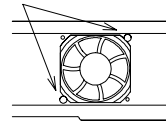

(7) Remove AC/DC Power unit

Remove 4 screws(o) and 2 screw(p), then disconnect PESW1(VH-6P), PEY1(VH-5P), PED(EH-12P), PF1(EH-3P), PF2(EH-3P), PF3(EH-3P) connectors.

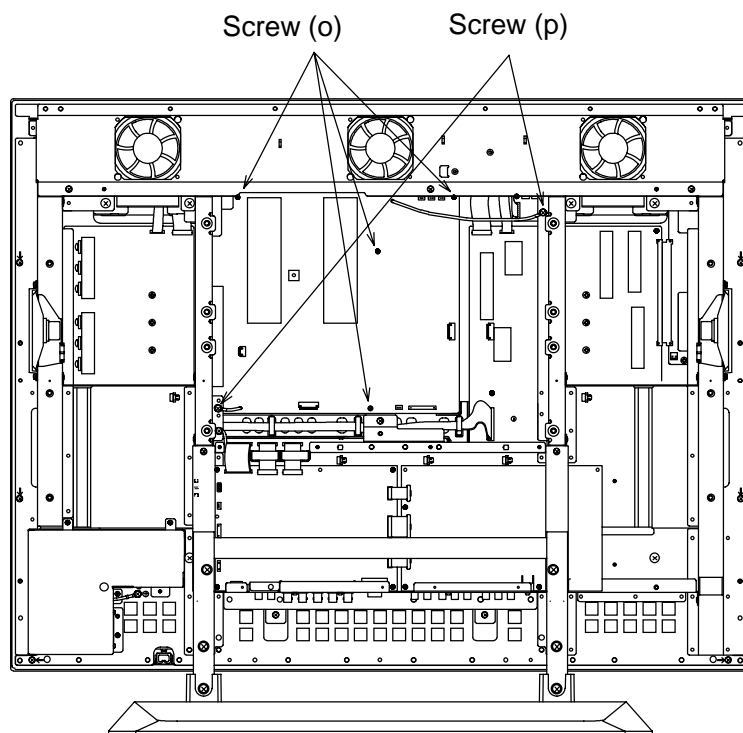

7. Re-Adjustment

After changing the Signal PWB or Panel Module, re-adjustment is needed according to the item 7.1 to 7.5 For Video PWB, item 7.3 to 7.5 are needed.

7.1 Personal Computer (PC)input black level/fundamental amplitude adjustment

How to Prepare

- 1.Connect RGB input terminal XGA(Vertical Sync Frequency 60Hz),0.7Vpeak,no -set up.
- 2.Appear and Adjust screen OSD Menu of Picture:
Contrast:127 Brightness:0, Color Select :MID, Video level :0.7V.

How to Adjust

- 1.Set Service Adjustment Mode and adjust as follows by Remote Control Transmitter
(7.5 Refer How to set to Service Adjustment Mode)
- 2.Set Adjustment No.35,36 ,and 37 scale to 255
- 3.Input full black level Signal
- 4.Set Adjustment No.41 to changing point from black to Red(set to black point)
- 5.Set Adjustment No.42 to changing point from black to Green(set to black point)
- 6.Set Adjustment No.43 to changing point from black to Blue(set to black point)
- 7.Input all white level Signal
- 8.Set Adjustment No.44 to changing point from Red to black(set to black point)
- 9.Set Adjustment No.45 to changing point from Green to black(set to black point)
- 10.Set Adjustment No.46 to changing point from Blue to black(set to black point)
Tolerances of each color adjustment numbers are less than 10, if more than 10,
Re-adjust from above 2 steps.

7.2 PC color temperature adjustment

How to prepare

- 1.Connect RGB input terminal XGA(Vertical Sync Frequency 60Hz),0.7Vpeak, without set up signal.
- 2.Window color (R,G and B)should be 255 each.
and input white window(33%) Signal.
- 2.Appear and Adjust screen OSD Menu of Picture:
Contrast:127, Brightness:0,GAMMA:2.2,Video level:0.7V

How to Adjust

- 1.Set Service Adjustment Mode and adjust as follows by Remote Control Transmitter.
- 2.Mesurement probe of CRT Color Analyzer CA-100 is set on the center of screen.
(Center of white window signal)

3.Adjust color temperature as follows by increasing or reducing numbers of NO.32,33,34.

PC color temperature (COOL)

$x=0.277 \pm 0.002$, $y=0.289 \pm 0.002$ at 10400K

4.Adjust color temperature as follows by increasing or reducing numbers of NO.35,36,37.

PC color temperature (NORM)

$x=0.283 \pm 0.002$, $y=0.298 \pm 0.002$ at 9300K

5.Adjust color temperature as follows by increasing or reducing numbers of NO.38,39,40.

PC color temperature (WARM)

$x=0.313 \pm 0.002$, $y=0.329 \pm 0.002$ at 6500K

Suggestion

- 1.Luminance of panel surface is less than 20lux to arrange adjustment environment
- 2.Color select mode is automatically set to COOL while adjustmentNo.32,33 and 34.
- 3.Color select mode is automatically set to NORM while adjustmentNo.35,36 and 37.
- 4.Color select mode is automatically set to WARM while adjustmentNo.38,39 and 40.

7.3 Video input black level/fundamental amplitude adjustment

How to Prepare

1.Connect Video input (NTSC 3.58),

Video level 0.714Vp-p, Sync level 0.286Vp-p, no set up

2.Appear and Adjust screen OSD Menu of Picture:

Contrast: 127 Brightness:0, Video level: NORMAL, Color Select: MID

How to Adjust

- 1.Set Service Adjust Mode and adjust as follows by Remote Control Transmitter
 - 2.Set Adjustment No.35,36, and 37 scale to 255
 - 3.Input all black level Signal
 - 4.Set Adjustment No.41 to changing point from black to Red(set to black point)
 - 5.Set Adjustment No.42 to changing point from black to Green(set to black point)
 - 6.Set Adjustment No.43 to changing point from black to Blue(set to black point)
 - 7.Input all white level Signal
 - 8.Set Adjustment No.44 to changing point from Red to black(set to black point)
 - 9.Set Adjustment No.45 to changing point from Green to black(set to black point)
 - 10.Set Adjustment No.46 to changing point from Blue to black(set to black point)
- Tolerances of each color adjustment numbers are less than 20, if more than 20,
Re-adjust from above 2 steps.

7.4 Video color temperature adjustment

How to prepare

- 1.Connect Video input (NTSC 3.58),
Video level 0.714Vp-p ,Sync level 0.286Vp-p,no -set up
- 2.Input white window(33%) Signal.
- 2.Appear and Adjust screen OSD Menu of Picture:
Contrast:127 ,Brightness:0,Video level:NORMAL,GAMMA:2.2

How to Adjust

- 1.Set Service Adjust Mode and adjust as follows by Remote Control Transmitter.
- 2.Mesurement probe of CRT Color Analyzer CA-100 is set on the center of screen.
(Center of white window signal)
- 3.Adjust color temperature as follows by increasing or reducing numbers of NO.32,33,34.

Video color temperature (COOL)

$x=0.269 \pm 0.002$, $y=0.266 \pm 0.002$ at 14100K

- 4.Adjust color temperature as follows by increasing or reducing numbers of NO.35,36,37.

Video color temperature (NORM)

$x=0.287 \pm 0.002$, $y=0.287 \pm 0.002$ at 9400K

- 5.Adjust color temperature as follows by increasing or reducing numbers of NO.38,39,40.

Video color temperature (WARM)

$x=0.314 \pm 0.002$, $y=0.315 \pm 0.002$ at 6500K

Suggestion

- 1.Luminance of panel surface is less than 20lux to arrange adjustment environment
- 2.Color select mode is automatically set to COOL while adjustmentNo.32,33 and 34.
- 3.Color select mode is automatically set to NORM while adjustmentNo.35,36 and 37.
- 4.Color select mode is automatically set to WARM while adjustmentNo.38,39 and 40.

7.5 How to set to Service Adjustment Mode

Turn off the sub power button(or power button on the Remote Control Transmitter)
then pushing RGB/VIDEO and SELECT buttons located on the bottom of the set
and turn on the sub power button until "Service Adj. Mode" OSD is appeared(more than
5 seconds)

When fall out from Service Adjust Mode, turn off the sub power button(or power button
on the Remote Control Transmitter).

**THE UPDATED PARTS LIST
FOR THIS MODEL IS
AVAILABLE ON ESTA**

HITACHI
Hitachi, Ltd. Tokyo, Japan
International Sales Division
THE HITACHI ATAGO BUILDING,
No. 15-12 Nishi Shinbashi, 2 - Chome,
Minato - Ku, Tokyo 105-8430, Japan.
Tel: 03 35022111

HITACHI EUROPE LTD,
Whitebrook Park
Lower Cookham Road
Maidenhead
Berkshire
SL6 8YA
UNITED KINGDOM
Tel: 01628 643000
Fax: 01628 643400
Email: consumer-service@hitachi-eu.com

HITACHI EUROPE S.A.
364 Kifissias Ave. & 1, Delfon Str.
152 33 Chalandri
Athens
GREECE
Tel: 1-6837200
Fax: 1-6835964
Email: service.hellas@hitachi-eu.com

HITACHI EUROPE GmbH
Munich Office
Dornacher Strasse 3
D-85622 Feldkirchen bei München
GERMANY
Tel: +49-89-991 80-0
Fax: +49-89-991 80-224
Hotline: +49-180-551 25 51 (12ct/min)
Email: HSE-DUS.service@hitachi-eu.com

HITACHI EUROPE S.A.
Gran Via Carlos III, 101-1
08028 Barcelona
SPAIN
Tel: 93 409 2550
Fax: 93 491 3513
Email: atencion.cliente@hitachi-eu.com

HITACHI EUROPE srl
Via Tommaso Gulli N.39, 20147
Milano, Italia
ITALY
Tel: +39 02 487861
Tel: +39 02 38073415 Servizio Clienti
Fax: +39 02 48786381/2
Email: customerservice.italy@hitachi-eu.com

HITACHI Europe AB
Box 77 S-164 94 Kista
SWEDEN
Tel: +46 (0) 8 562 711 00
Fax: +46 (0) 8 562 711 13
Email: csgswe@hitachi-eu.com

HITACHI EUROPE S.A.S
Lyon Office
B.P. 45, 69671 BRON CEDEX
FRANCE
Tel: 04 72 14 29 70
Fax: 04 72 14 29 99
Email: france.consommateur@hitachi-eu.com

HITACHI EUROPE LTD (Norway) AB
STRANDVEIEN 18
1366 Lysaker
NORWAY
Tel: 67 5190 30
Fax: 67 5190 32
Email: csgnor@hitachi-eu.com

HITACH EUROPE AB
Egebækgård
Egebækvej 98
DK-2850 Nærum
DENMARK
Tel: +45 43 43 6050
Fax: +45 43 60 51
Email: csgnor@hitachi-eu.com

HITACHI EUROPE AB
Neopoli / Niemenkatu 73
FIN-15140 Lahti
FINLAND
Tel : +358 3 8858 271
Fax: +358 3 8858 272
Email: csgnor@hitachi-eu.com

Hitachi Europe Ltd
Bergensesteenweg 421
1600 Sint-Pieters-Leeuw
BELGIUM
Tel: +32 2 363 99 01
Fax: +32 2 363 99 00
Email: sofie.van.bom@hitachi-eu.com

HITACHI EUROPE LTD
Na Sychrove 975/8
101 27 Praha 10 - Bohdalec
CZECH REPUBLIC
Tel: +420 267 212 383
Fax: +420 267 212 385
Email: csgnor@hitachi-eu.com

www.hitachidigitalmedia.com